

# F BUILDING SMART CART

## Instructional Manual

### Step-by-Step Guide

[Table of Contents](#)




# Table of Contents

<a href="#"><u>Cover</u></a> .....	1
<a href="#"><u>Table of Contents</u></a> .....	2
<a href="#"><u>Smart Cart Components</u></a> .....	3
<a href="#"><u>Projector Remote (diagram)</u></a> .....	4
<a href="#"><u>Computer image to LCD Projector</u></a> .....	5
<a href="#"><u>Laptop image to LCD Projector</u></a> .....	6
<a href="#"><u>DVD\VRC Player to LCD Projector</u></a> .....	7
<a href="#"><u>Help Desk and Training</u></a> .....	8

# Smart Cart Components

## Table of Contents

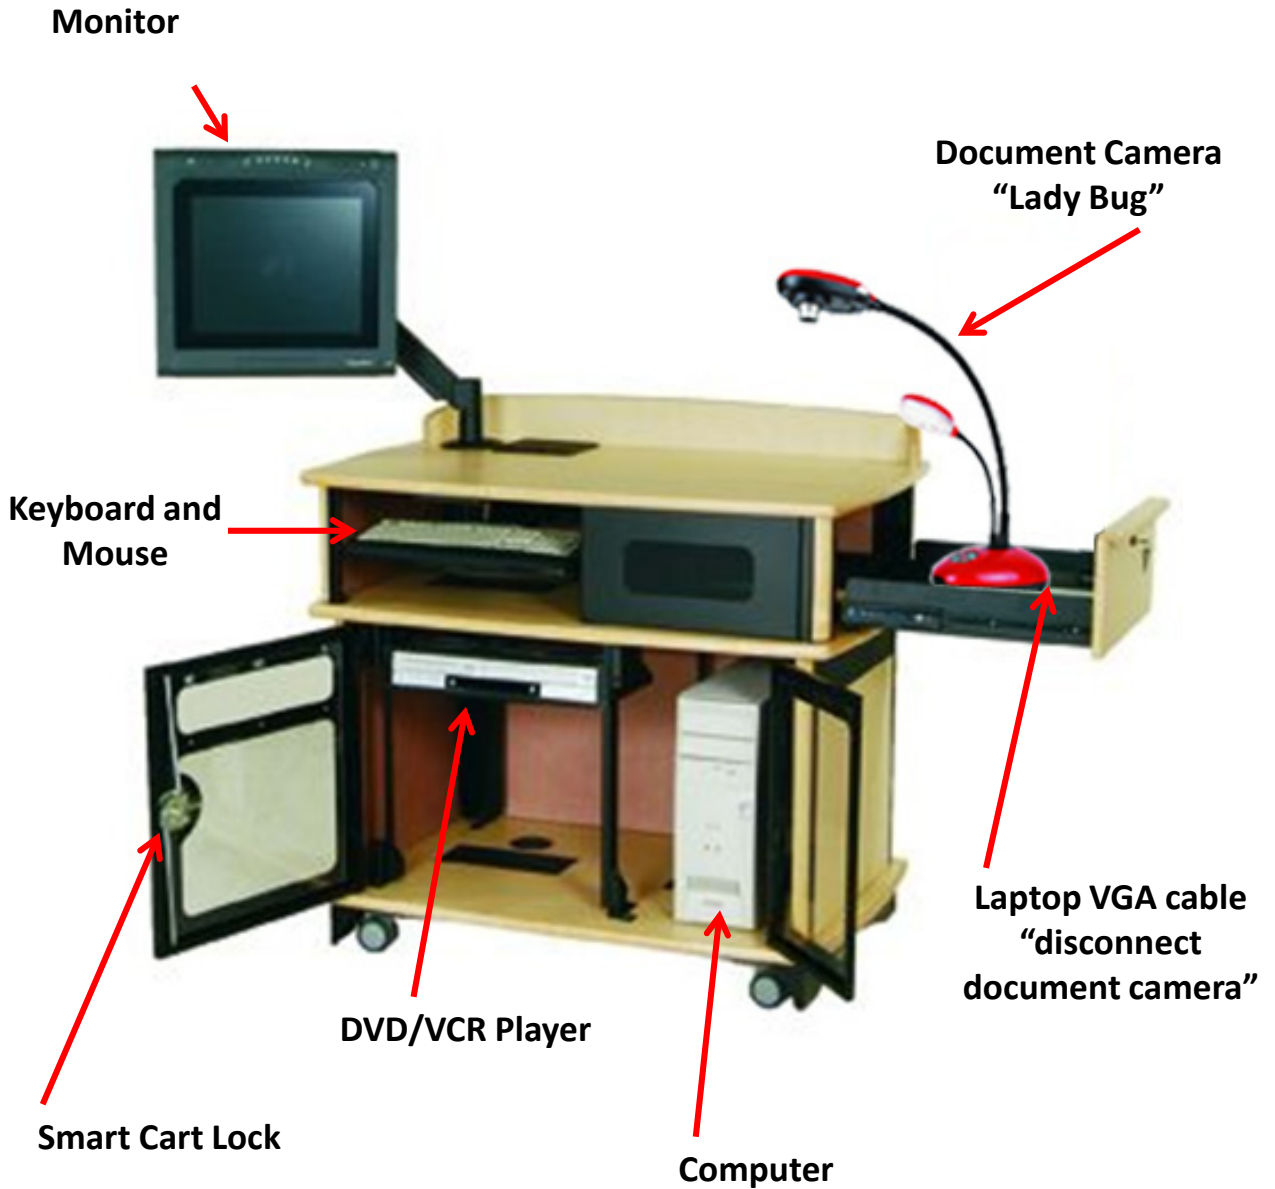

# Casio F210WN Projector Instructions

Use this button to select inputs for the Computer, Doc Cam, or DVD

Power on/off


Use the arrow buttons to scroll to the desired input



## Select HDMI 1 for the PC



## Select Computer for the Doc Cam

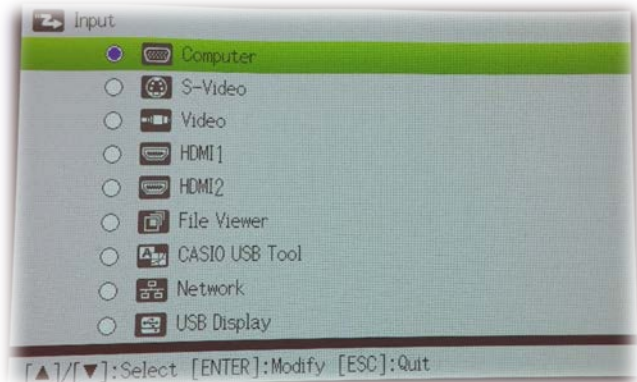

## Select Video for the DVD/VHS player



# Smart Cart Instructions

## Computer to LCD Projector

### Table of Contents

1. Turn the computer and monitor on.
2. Turn on the LCD Projector (ceiling projector) using the LCD projector remote.
3. Log onto the computer with your **User Name** and **Password**. You should have received your User Name and Password when you were hired. If you have not received your login Name or Password please contact your department Chair.
4. Select Button 1 on the LCD projector remote to see the computer image ([see diagram page 4](#)).

**NOTE: ALL AUDIO GOES THROUGH THE LCD PROJECTOR.  
YOU WILL NOT HEAR AUDIO UNLESS THE LCD  
PROJECTOR IS TRUNED ON!**

# Smart Cart Instructions

## Laptop to LCD Projector

### Table of Contents

1. Remove the VGA cable from the Document Camera (*located in the Smart Cart drawer*).
2. Hook the VGA cable to the laptop (*see cable below*).
3. Hook the 3mm Audio cable to the Headphone jack on the Laptop
4. Turn on the LCD Projector (ceiling projector) using the LCD projector remote.
5. Turn on the Laptop.
6. Select Button 2 on the LCD projector remote to see the the Laptop image ([see diagram page 4](#)).

**NOTE: ALL AUDIO GOES THROUGH THE LCD PROJECTOR.  
YOU WILL NOT HEAR AUDIO UNLESS THE LCD  
PROJECTOR IS TRUNED ON!**

VGA cable  
with 3mm Audio



# Smart Cart Instructions

## **DVD\VCR to LCD Projector**

### Table of Contents

1. Turn **ON** the LCD Projector (ceiling projector) using the LCD projector remote.
2. Select **Video** Button on the LCD projector remote to see the DVD\VCR image. [\*\(see diagram page 4\).\*](#)
3. Turn on the DVD\VCR player.
4. **DVD**: Open the DVD drive and place the DVD in the DVD drive. Push the DVD drive in and press **Play**. *(make sure DVD is selected on the player)*
5. **VHS**: Select VHS on the DVD\VCR player. Place the VHS tape in the VHS slot and press play.

**NOTE: ALL AUDIO GOES THROUGH THE LCD PROJECTOR.  
YOU WILL NOT HEAR AUDIO UNLESS THE LCD  
PROJECTOR IS TRUNED ON!**

# Help Desk and Training

## [Table of Contents](#)

### **For Further Assistance:**

**Please Call the Cuyamaca HELP DESK at X4395  
or after 5:30 pm please call the Districts HELP DESK X7547.**

### **For Training:**

**Please call Cynthia ([Cyndy](#)) Bourget  
Instructional Media Services Coordinator X4415**